


# Assembly Instructions in 8 easy steps

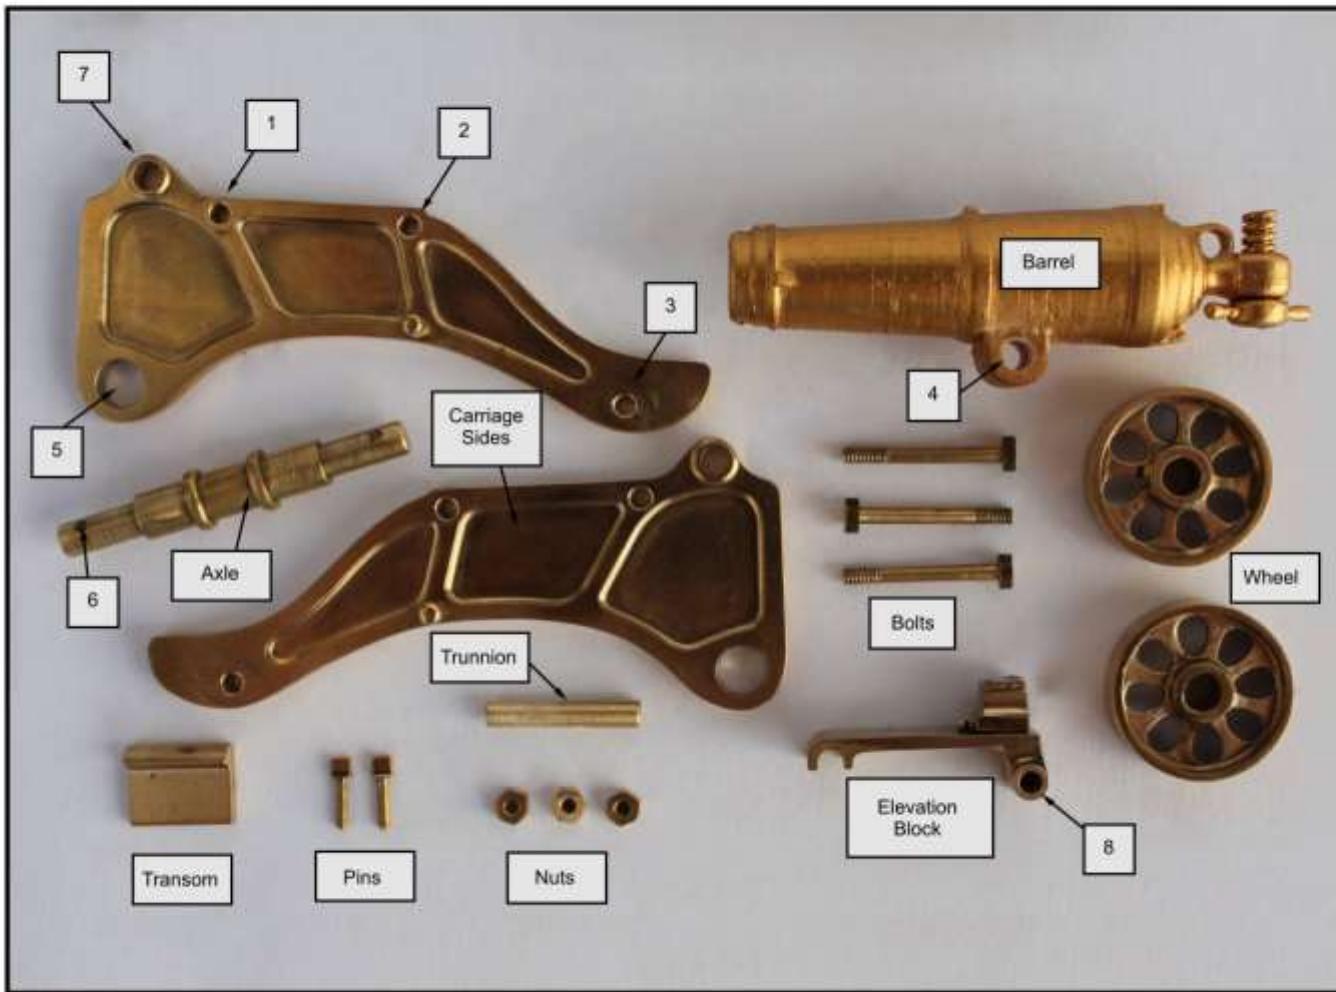

1. Place the 3 x **Bolts** through holes **1, 2 & 3** from the **Carriage Side** shown in the picture above.
2. Position the **Axle** through the hole numbered **5** from the opposite side. Ensure that the location tab is in the slot provided to prevent rotation of the axle.
3. Locate the **Elevation block**, with bolt **2** penetrating through hole **8**.
4. Place the **Transom** into the slot provided at the rear of the **Carriage side**.
5. Fit these parts through the opposite **Carriage Side** and secure the bolts with the 3 **Nuts** provided.
6. Place the **Barrel** into position and locate with the **Trunnion** through hole **7**.
7. Fit the **Wheels** to the axle and place the pins in hole **6** at each end of the trunnion to secure the wheels in position.
8. Your model is ready for action!