


Assembly Instructions in 10 easy steps

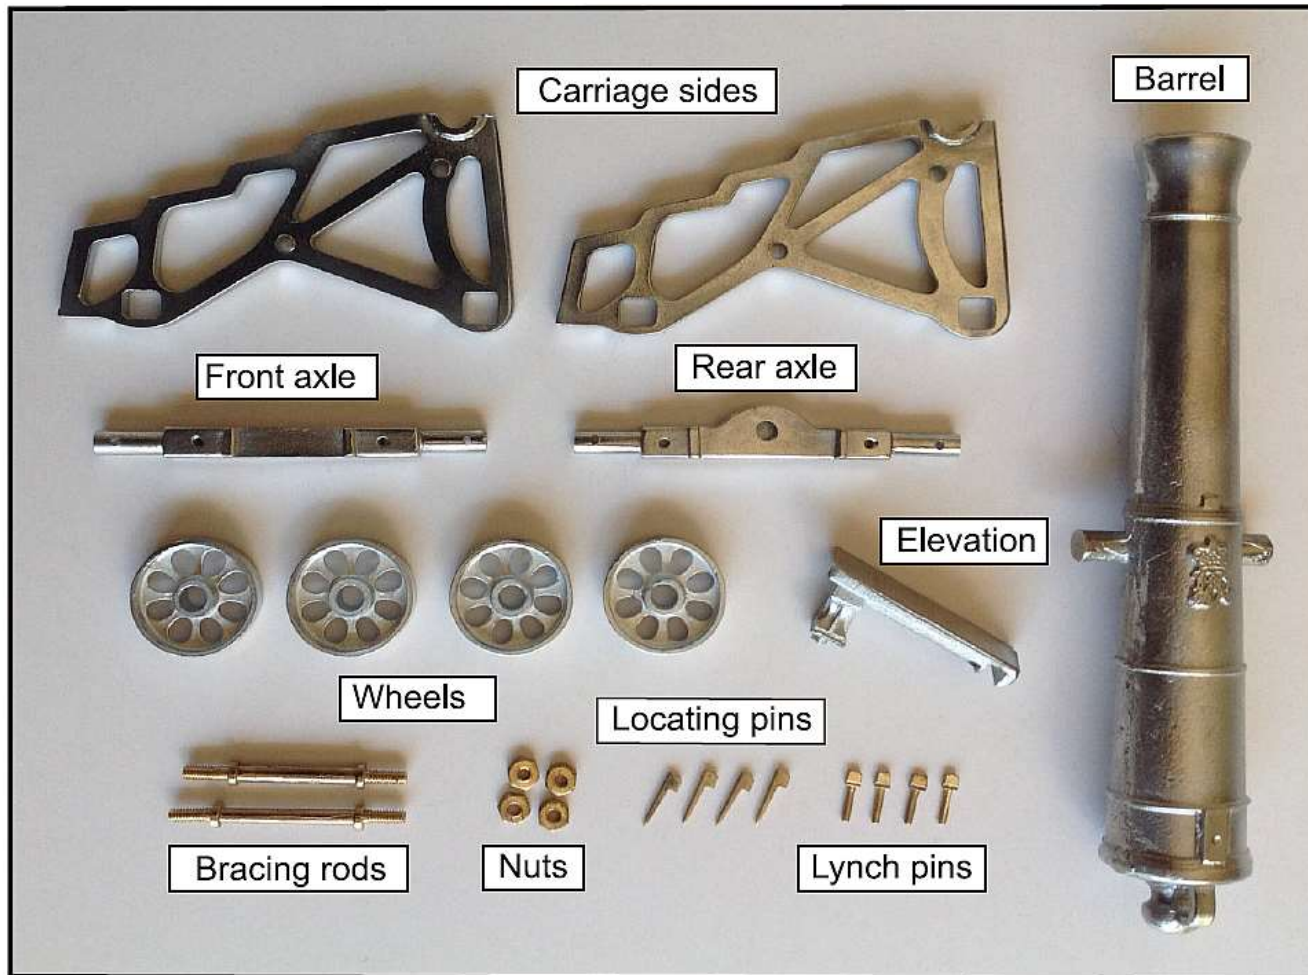

1. Fit short brass bracing rod to front and longer brass rod to the back of a carriage side.
2. Tighten the nuts to the bracing rods.
3. Fit front and rear axle to the carriage side.
4. Match 2nd carriage side to the axles and bracing rods.
5. Tighten nuts to the bracing rods.
6. Fit the 4 axle locating pins to carriage.
7. Fit wheels.
8. Add a lynch pin to each wheel.
9. Fit the elevation mechanism in the locating hole on the rear axle.
10. Place the barrel.

Display your hand finished 1/28th scale model assembled by you.